

Hauptseite



Navigation

The screenshot shows a music player interface with the following elements and annotations:

- Top Bar:** Displays the current track "Natacha Atlas - matrah interlude" and playback status "[playing] track 3/18 time 0:08/1:01". It includes volume controls (-5dB, -1dB, Mute, +1dB, +5dB) and a volume slider set to -45.0dB.
- Navigation:** A back arrow icon is annotated with "zurück zum Server" and "eine Seite zurück".
- Artist/Album Info:** Shows "Twonky net > Mounqaliba - Natacha Atlas ★". A music note icon is annotated with "zurück zum Server" and "eine Seite zurück".
- Album Cover:** A cover image is annotated with "Cover in Groß + ArtistInfos".
- Track List:** A list of tracks is shown, starting with "01: intro ~00:33" and "02: makaan ~04:46". The text "alle 18 Titel" is next to the album cover. Annotations include "Alle Lieder hören" pointing to the list and "Liste ab diesem Lied hören" pointing to track 02.
- Playlist Actions:** On the right side of the track list, there are icons for playlist management:
 - A list icon is annotated with "Ansicht normal/kompakt".
 - A plus sign icon is annotated with "zur Playlist".
 - A plus sign icon is annotated with "alle Lieder zur Playlist hinzufügen".
 - A plus sign icon is annotated with "nur dieses Lied zur Playlist hinzufügen".
- Footer:** The text "HIFIAkademie netPlayer" is visible at the bottom.

Aktuelle Playlist


The image shows a music player interface with the following elements and annotations:

- aktuelle Playlist**: Points to the top right navigation menu icon.
- zurück**: Points to the back arrow icon in the playlist header.
- Zugriff auf: Playlistoptionen und gespeicherte Listen Favoriten Verlauf**: Points to the playlist options icons (list, compact, cover, shuffle, repeat, star).
- Ansicht: normal/kompakt Cover**: Points to the view toggle icons (list, compact, cover).
- Liste löschen**: Points to the trash icon in the playlist header.
- Eintrag löschen**: Points to the trash icon next to a track.
- Eintrag nach oben schieben nach unten schieben**: Points to the up and down arrow icons next to a track.
- Eintrag hören**: Points to the play button icon next to a track.

Track	Artist	Album	Source	Duration	Actions
1/11 An Aborted Beginning	Nils Frahm	Spaces	tidal	0:01:34	Up, Down, Delete
2/11 Says	Nils Frahm	Spaces	tidal	0:08:18	Up, Down, Delete
3/11 Said and Done	Nils Frahm	Spaces	tidal	0:09:38	Up, Down, Delete
4/11 Went Missing	Nils Frahm	Spaces	tidal	0:04:59	Up, Down, Delete
5/11 Familiar	Nils Frahm	Spaces	tidal	0:05:38	Up, Down, Delete
6/11 Improvisation for Coughs and a Cell Phon..	Nils Frahm	Spaces	tidal	0:06:44	Up, Down, Delete
7/11 Hammers	Nils Frahm	Spaces	tidal	0:03:48	Up, Down, Delete
8/11 For – Peter – Toilet Brushes – Mor..	Nils Frahm	Spaces	tidal	0:16:49	Up, Down, Delete
9/11 Out There We Driving	Nils Frahm	Spaces	tidal		Up, Down, Delete

HIFIakademie netPlayer

Einstellungen/Optionen

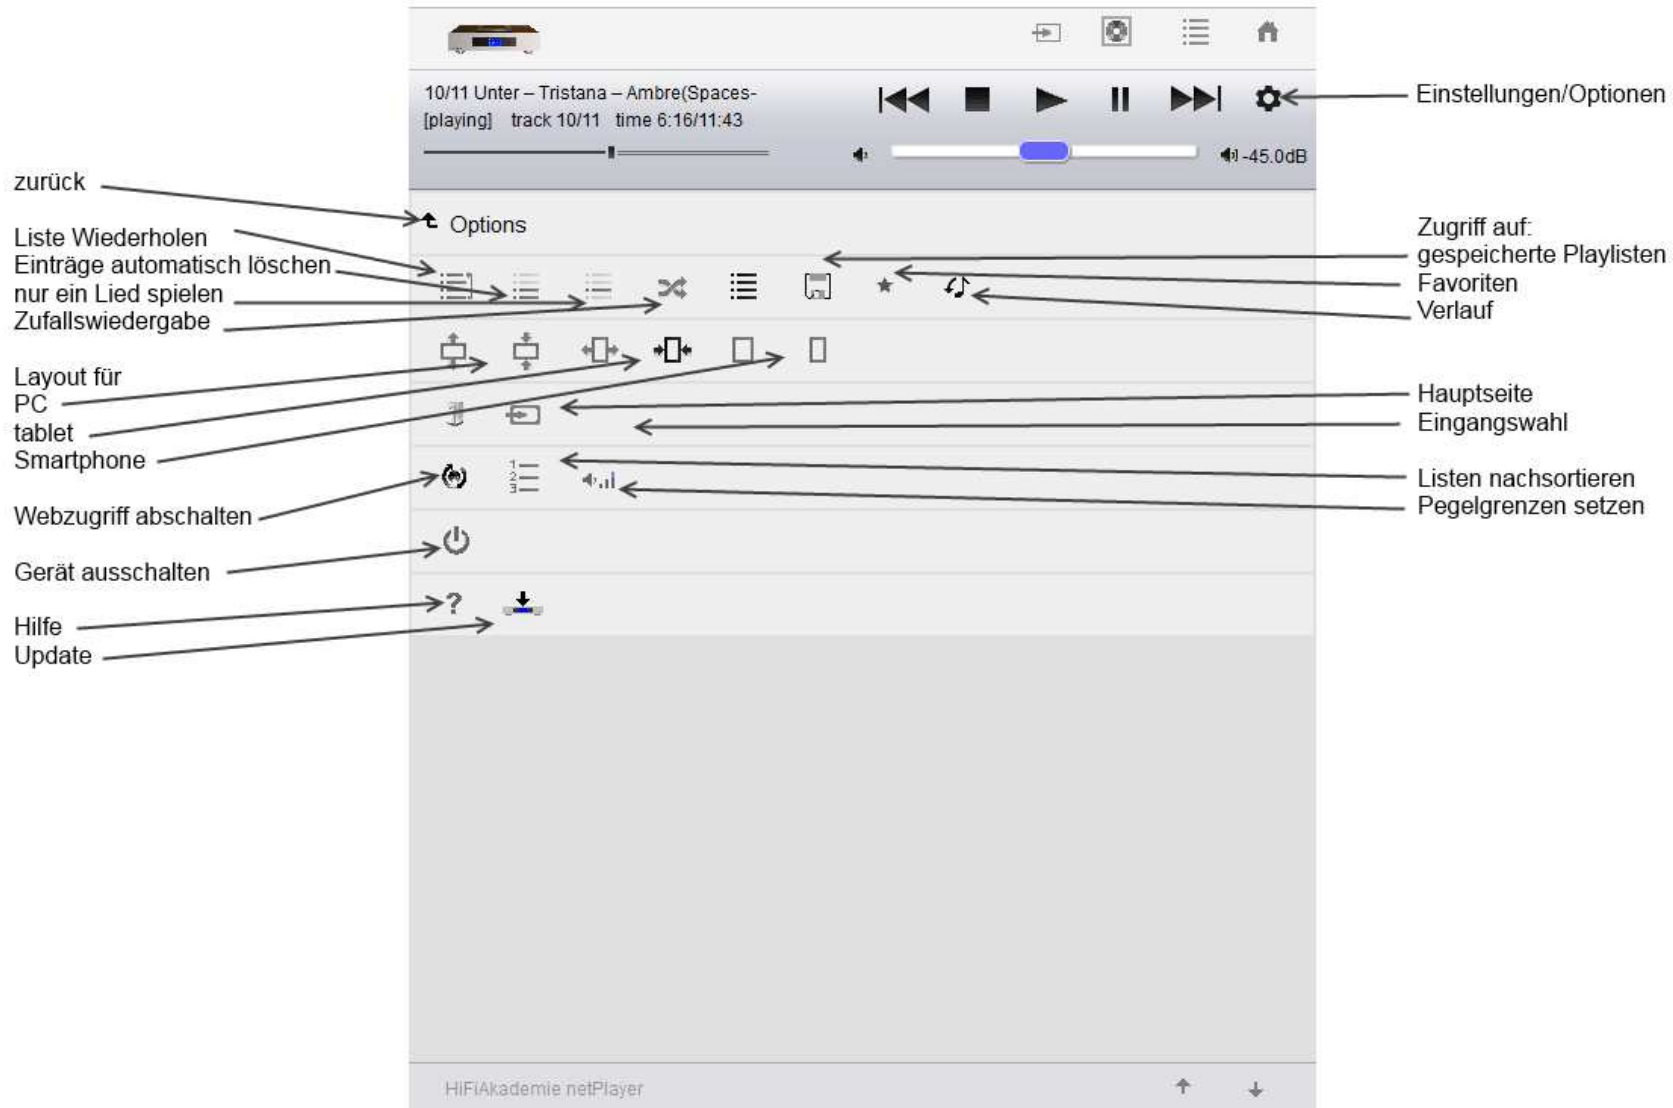

Optionen => Pegelgrenzen

The screenshot displays the volume control interface of a music player. At the top, the track information "Natacha Atlas - riverman" and "[playing] track 6/18 time 0:21/5:40" is shown. The volume level is currently set to -45.0dB. A gear icon labeled "Pegelgrenzen" (Volume Limits) is located to the right of the volume slider. Below the slider, there are several sections for adjusting volume limits and settings:

- Level max:** A section with a "zurück" (back) arrow and a "Level max" label.
- Maximum des Pegelstellers:** A row of buttons with values 0, -10, -20, -30, and -40.
- min:** A label indicating the minimum volume setting.
- Minimum des Pegelstellers:** A row of buttons with values -40, -50, -60, -70, and -80.
- set:** A label indicating the current volume setting.
- Pegel definiert verändern:** A row of buttons with values -5dB, -1dB, -45.0, +1dB, and +5dB.
- Mute:** A button labeled "Mute" is located above the volume slider.

Annotations with arrows point to these specific elements:

- "zurück" points to the back arrow in the "Level max" section.
- "Maximum des Pegelstellers" points to the -20 dB button.
- "Minimum des Pegelstellers" points to the -70 dB button.
- "Pegel definiert verändern" points to the -45.0 dB button.
- "Mute" points to the "Mute" button.
- "Pegelgrenzen" points to the gear icon.

The bottom of the interface shows the text "HIFIakademie netPlayer" and two navigation arrows (up and down).